



Jacobs Adapter JA (with Tr. nut)

Metric Sizes Unit : Metric

Type 1

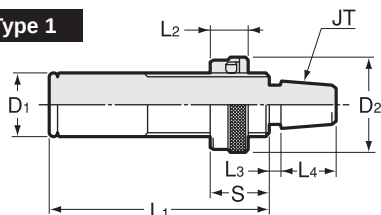

Type 2

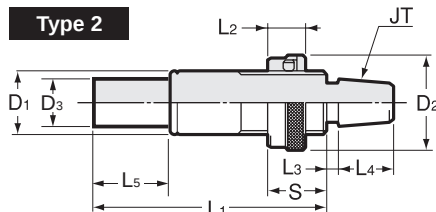

Ordering Example


JA 16 - JT2S
size JT No.

Code	Model	Type	D1	JT	D2	D3	L1	L2	S	L3	L4	L5
0714 03000162	JA 16 -JT2S	1	16	2S	24.6	—	76	16	16 ~ 32	3	18	—
0714 03000202	20 -JT2S	1	20	2S	31.6	—	85	16	16 ~ 37	3	18	—
0714 03000206	-JT6	1	20	6	31.6	—	85	16	16 ~ 37	4	24	—
0714 03000252	25 -JT2S	1	25	2S	35.6	—	85	16	16 ~ 37	3	18	—
0714 03000256	-JT6	1	25	6	35.6	—	85	16	16 ~ 37	4	24	—
0714 03000322	32 -JT2S	2	32	2S	44.6	25	119	19	19 ~ 39	3	18	30
0714 03000326	-JT6	2	32	6	44.6	25	119	19	19 ~ 39	4	24	30
0714 03000422	42 -JT2S	1	42	2S	55.6	—	135	19	19 ~ 48	3	18	—
0714 03000426	-JT6	1	42	6	55.6	—	135	19	19 ~ 48	4	24	—

Not applicable for some holder sizes. Please see milling chuck pages.

Jacobs Adapter JAB

Metric Sizes Unit : Metric

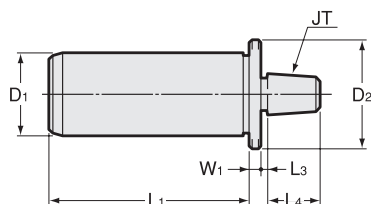

Ordering Example

JAB 16 - JT2S
size JT No.

Code	Model	D1	JT	L1	D2	W1	L3	L4
0711 03100162	JAB 16 -JT2S	16	2S	60	19	3	3	18
0711 03100202	20 -JT2S	20	2S	75	24	3	3	18
0711 03100206	-JT6	20	6	75	24	3	4	24
0711 03100252	25 -JT2S	25	2S	75	29	3	3	18
0711 03100256	-JT6	25	6	75	29	3	4	24
0711 03100322	32 -JT2S	32	2S	75	36	3	3	18
0711 03100326	-JT6	32	6	75	36	3	4	24
0711 03100422	42 -JT2S	42	2S	115	47	3	3	18
0711 03100426	-JT6	42	6	115	47	3	4	24

Not applicable for some holder sizes. Please see milling chuck pages.

Spanner



Ordering Example

HS - 1 - 16

Code	Spanner	Chuck	Chuck size	
			mm	inch
0711 00001016	HS-1-16	CT·S, CT·A	16	—
0711 00002020	HS-2-20	CT·S, CT·A	20	0750
0711 00002525	HS-2.5-25	CT·S, CT·A, CTZ	25	1000
0711 00003032	HS-3-32	CT·S, CT·A, CTZ	32	1250
0711 00004042	HS-4-42	CT·S, CT·A, CTZ	42	—
0711 00005042	HS-4V	CT·S	—	2000